


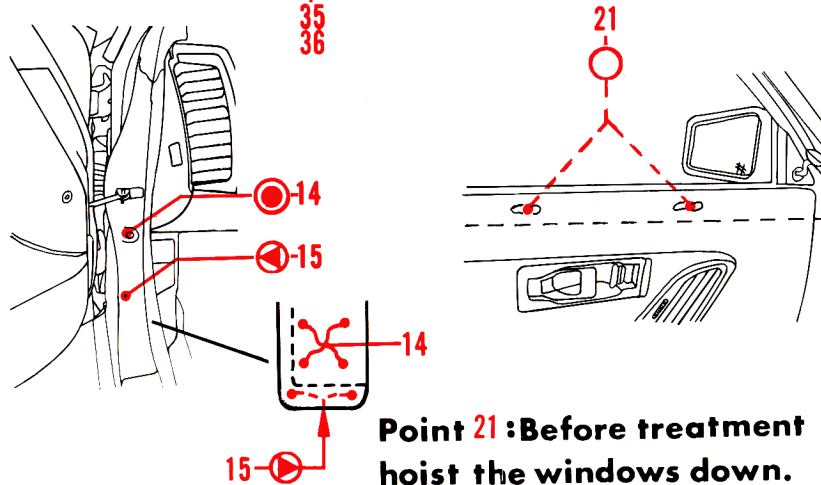
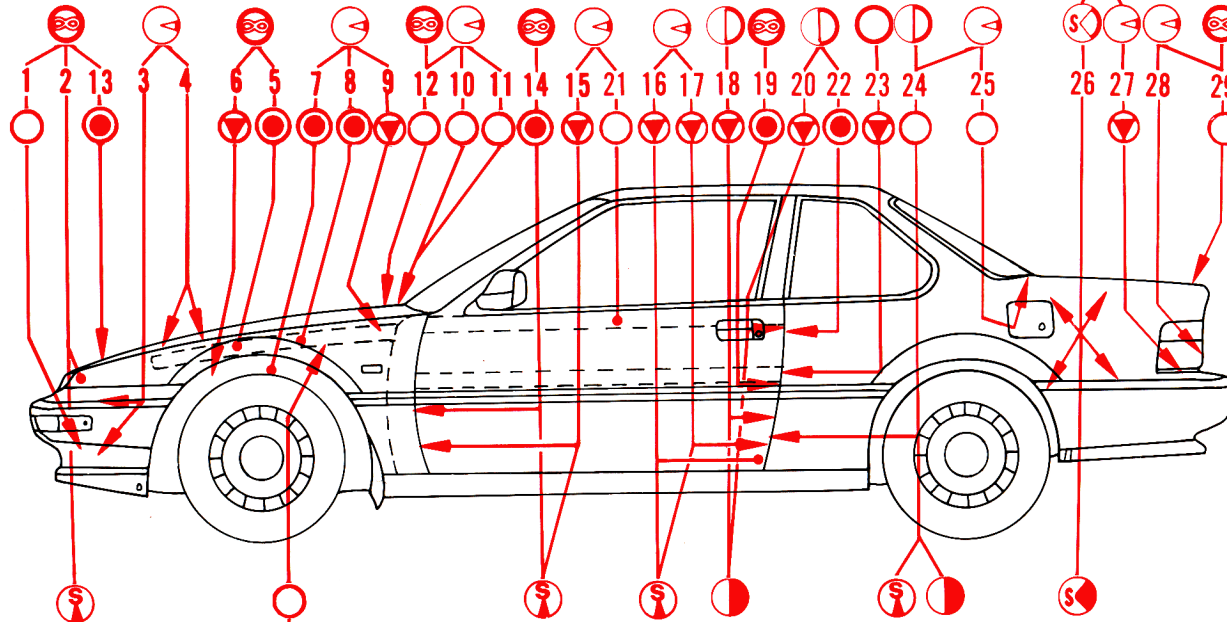


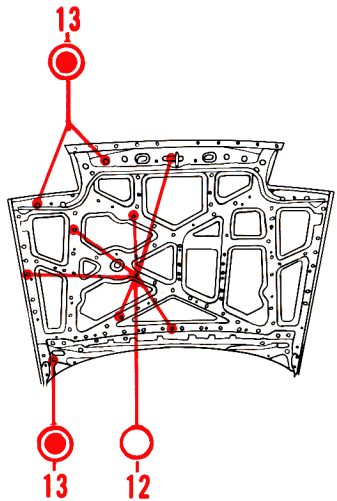





# Tuff-Kote Dinol

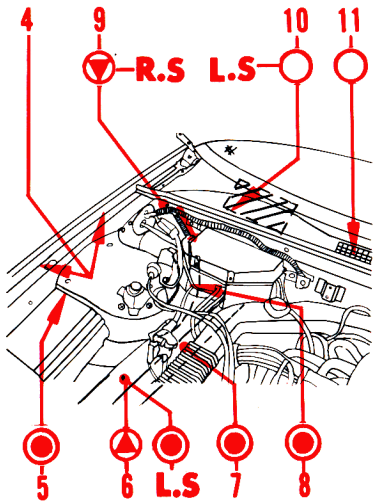

Honda Prelude 88-

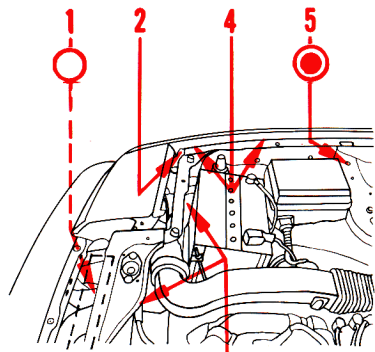

Point 21 : Before treatment hoist the windows down.

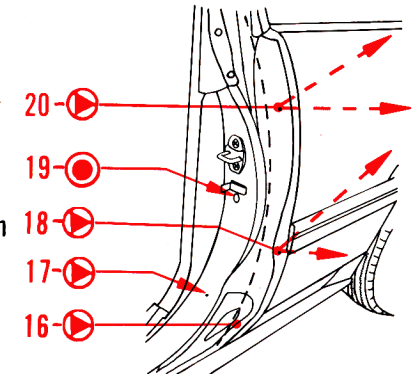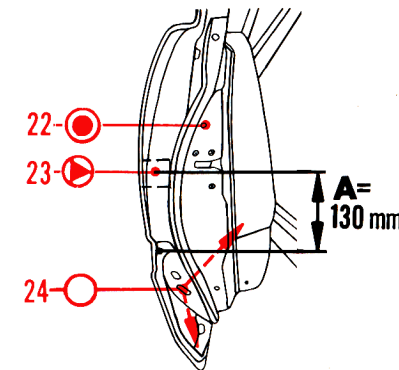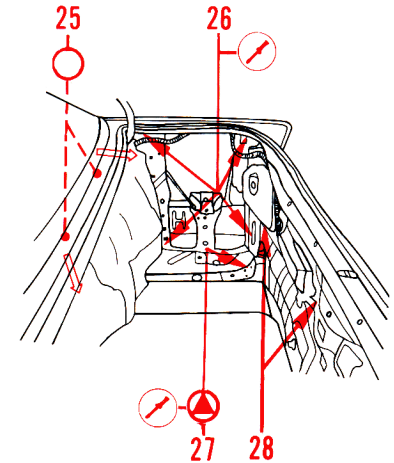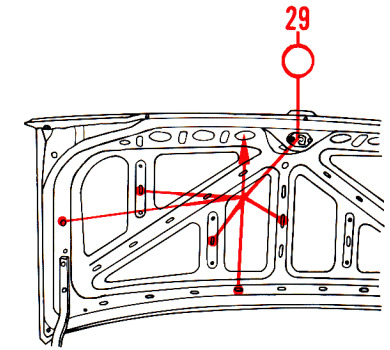



# Tuff-Kote Dinol



## Honda Prelude 88-

